


HAD Girdle Viewer III

USER GUIDE

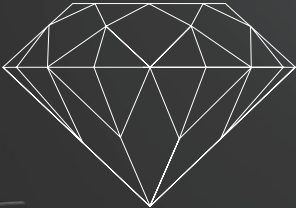

HAD

HAD Girdle Viewer Parts List



j.USB Cable



f.Rotating Platform for Jewellery Holder



g.Rotating Platform for Double-Sided Cone Stage Holder



h.Double-Sided Cone Stage



k.Power Socket



m.Switch Button

n.Flex Light-Brightness Adjustment Knob

Diamond Size Requirements



g. Rotating Platform
for Double-Sided
Cone Stage Holder



f. Rotating Platform
for Jewellery Holder

Overview of Stages		
Stage Name	Type of Diamond	Suggested Use
Rotating Platform for Double-Sided Cone Stage Holder	Loose Diamonds	Diamond Carat Size (ct) 0.30-12ct
Rotating Platform for Jewellery Holder	Mounted Diamonds	

Setting Up HAD Girdle Viewer III

- Plug the instrument into the power supply
- Turn the instrument on by pressing the power button
- Turn on flex light, and adjust light angle
- Adjust stage height platform, until camera catches diamond girdle information



a



b



c



d

Loose Diamond

Choose Rotating Platform for Double-Sided Cone Stage Holder (g), and take the best girdle view

1. Put Rotating Platform for Double-Sided Cone Stage Holder (g) on Stage Height Platform Adjustment (c)
2. Turn on Flex Light(n)
3. Put loose diamond as following picture



4. Adjust stage height platform (c), to display diamond girdle view on LCD screen
5. Rotate diamond stone rotating platform (g), to display diamond girdle inscription on camera
6. Rotate Camera Focus Knob (e), to display girdle view clearly on camera



Rotates Stage Right and Left

Raises and Lowers Stage

3 mm



5 mm

Double-Sided Cone Stage

Camera Focus Knob



Mounted Diamonds

Choose Rotating Platform for Jewellery Holder (f), and take the best girdle view

1. Put Rotating Platform for Jewellery Holde (f) on stage height platform adjustment (c)
2. Turn on Flex Light(n)
3. Put diamond ring as following picture



4. Adjust stage height platform (c), to display diamond girdle view on LCD screen
5. Rotate diamond ring rotating platform (f), to display diamond girdle inscription on camera
6. Rotate Camera Focus Knob (e), to display girdle view clearly on camera



Rotates Stage Right and Left

Raises and Lowers Stage

Camera Focus Knob



Important Notice

Claw on ring could cover part of girdle inscription

Product Parameters

Specifications	
Item Code	XWJ-122
Voltage	110V-220V
Magnification	30X-110X
Screen Size	4.2"
Package Size	26*23*18cm
Product Weight	2.3KG